

#34

# **AirDog<sup>®</sup>** **DF-220-5G** **FUEL PREPARATOR<sup>®</sup>**

**PATENT PROTECTED:**

<https://pureflowairdog.com/p-35853-patents.html>

## **2015-2016 DURAMAX INSTALLATION INSTRUCTIONS**

**PLEASE READ AND CHECK CONTENTS  
BEFORE INSTALLATION**



**PUREFLOW AIRDOG  
705 W. MAUSOLEUM RD.  
SHELBYVILLE, IN 46176**

**877-421-3187  
PUREFLOWAIRDOG.COM**

## TABLE OF CONTENTS

SECTION	DESCRIPTION	PAGE
1	TABLE OF CONTENTS	2
2	INTRODUCTION	3
3	SAFETY GUIDELINS	4
4	PRE-INSTALLATION CHECKS	5
5	PARTS LIST	6
6	BOLT KIT PARTS LIST	7
7	INSTALLATION ILLUSTRATION	8
8	FUEL TANK AND FACTORY FLEX LINE REMOVAL	9
9	WAP109 SUCTION TUBE INSTALLATION	11
10	AIRDOG® PUMP FITTING INSTALLATION	16
11	MARKING AND DRILLING THE FRAME STANDOFF	17
12	INSTALLING THE AIRDOG® ON THE CRADLE BRACKET	18
13	INSTALLING THE AIRDOG® ON THE FRAME STANDOFF	19
14	FUEL LINE ASSEMBLY OVERVIEW	20
15	SUCTION LINE (FROM THE WAP109 TO THE AIRDOG® INLET PORT)	21
16	FUEL SUPPLY LINE (FROM THE AIRDOG® ENGINE PORT TO THE FACTORY FRAME HARD FUEL LINE)	22
17	RETURN LINE (FROM THE AIRDOG® "R" PORT TO THE FUEL TANK)	23
18	WIRING HARNESS	24
19	INITIAL START PROCEDURE	27
20	FUEL FILTER MAINTENANCE	28
21	CLEANING THE GEROTOR ASSEMBLY	29
22	PRESSURE REGULATOR ADJUSTMENT	30
23	WARRANTY	31


## Thank you for choosing AirDog® for your truck fueling needs!

AirDog® recommends that a certified diesel shop technician install this product. Please note, if the end user performs the installation, it is recommended they have basic knowledge on how electric fuel systems operate and function. Failure to properly set up this fuel system may result in a voided warranty. **If properly set up per these instructions, the pump head carries a lifetime warranty to the original purchaser.** THIS WARRANTY IS NON-TRANSFERRABLE!

The AirDog® II-5G uses an adjustable diaphragm fuel pressure regulator to regulate the fuel pressure to the injection system. The pressure for this application is preset from the factory at 8-10psi. If a different pressure is desired, go to page 30 for instructions on how to adjust the pressure. **WARNING: RUNNING THE DF-220 PUMP ABOVE 55PSI DECREASE THE LIFE OF THE PUMP SIGNIFICANTLY AND MAY VOID THE WARRANTY. MORE FUEL PRESSURE DOES NOT MEAN MORE FUEL FLOW AND TOO MUCH PRESSURE MAY DAMAGE YOUR INJECTION SYSTEM! MORE FUEL PRESSURE DOES NOT MEAN MORE FUEL FLOW!**

### OVERVIEW ON HOW THE SYSTEM OPERATES

The AirDog® draws fuel from the tank from a high flow suction tube installed in the tank. The fuel is then pulled through a water separator before being pressurized through the Gerotor pump. The pressurized fuel is sent through the 2 micron fuel filter before being sent to the engine. The pump maintains pressure through a diaphragm fuel pressure regulator that recirculates fuel back through the water separator. The excess fuel is sent back to the tank through the modified factory suction line.

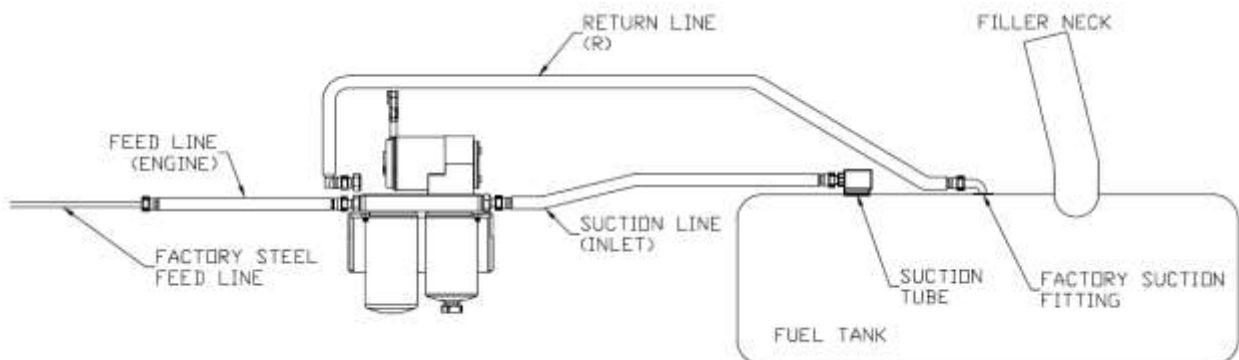



## SAFETY INSTRUCTIONS

### LEARN TO RECOGNIZE SAFETY INFORMATION

This is the safety alert symbol. When you see this symbol in this manual, **BE ALERT TO THE POTENTIAL FOR PERSONAL INJURY!**

Follow recommended precautions and safe operating practices.



### UNDERSTANDING SIGNAL WORDS

A signal word-**DANGER**, **WARNING**, or **CAUTION** is used with the safety alert symbol.

**DANGER** indicates a hazardous situation which, if not avoided, **WILL** result in death or serious injury.



**WARNING** indicates a hazardous situation which if not avoided, **COULD** result in death or serious injury.



**CAUTION** indicates a hazardous situation which if not avoided, **COULD** result in minor or moderate injury



**NOTICE** indicates a preferred installation procedure.





The installation of your AirDog® can be made relatively easy by following the steps outlined in this manual, and:

1. Inventory the package components completely. Notify PUREFLOW AIRDOG® immediately of any missing or damaged parts! 317-421-3180
2. Read the installation manual completely. Understand how the system operates and understand the installation recommendations before beginning the installation.
3. The installation recommendations contained herein are suggested installation guidelines only. Individual installations may vary.
4. If any installation procedure is uncertain, contact PUREFLOW® AIRDOG for technical assistance.
5. When installing the AirDog® fuel lines be sure to keep the **ORIGINAL ENGINE RETURN LINE** connected as it is from the factory!

**SAFETY GUIDELINES!**



Please be sure to chock the vehicle's tires to prevent rolling



Please use proper supports when working beneath an elevated vehicle



Most diesel pickups have two (2) 12 volt batteries. Disconnect the battery cables to both batteries before proceeding with the AirDog® installation



Vehicle main framereils should not be drilled into or welded upon.



Wear safety glasses or shield when using tools such as drills and grinders or when using a punch or chisel



Prolonged exposure to loud noise can cause impairment or loss of hearing. Wear suitable hearing protective devices such as ear muffs or ear plugs to protect against loud noises.









Use common sense when routing fuel lines and electrical wiring. Keep them away from hot exhaust components and/or moving parts. Properly secure lines to prevent chaffing.


**AirDog® Parts List**

QTY	DESCRIPTION	PART NUMBER	IMAGE
1	<b>AirDog® II-5G</b>	DF-220-5G	
1	<b>AirDog® Mounting Bracket</b>	001-3C-0004	
1	<b>Mounting Bracket Hardware Kit</b>	901-61-0102-PM-C-12	
1	<b>Wiring Harness</b>	5E-2-018-HD	
1	<b>14ft of 1/2" Fuel Line</b>	HS14	
1	<b>7ft of 5/8" Fuel Line</b>	HS5807	
1	<b>5/8" High Flow Suction Tube</b>	WAP109	
1	<b>1/2" Straight Fuel Line Quick Connect End</b>	FQC12S	
1	<b>3/8" 90° Fuel Line Quick Connect End</b>	FQC3890	
2	<b>1/2" 90° Fuel Line Quick Connect Fitting</b>	FQC1290	
2	<b>1/2" Male J2004 Quick Connect x 3/4" UNF</b>	08J2044-3/4UNF	
1	<b>3/8" Male J2004 Quick Connect x 7/16" UNF</b>	06J2044716UNF	
2	<b>3/4-16 ORB Male to -10 JIC Female Fitting</b>	4A-1-02-10-08-S	
2	<b>-10 JIC Male to 5/8" Barb</b>	4A-1-09-10-10-B	
1	<b>-10 JIC Male to -10 JIC Female 90° Fitting</b>	4A-2-04-10-10-S	
1	<b>Bundle of Plastic Ties</b>	5H-2-1-B	
1	<b>Customer Service O-ring Replacement Kit</b>	901-05-0500	

**901-61-0102-PM-C Bolt Kit Parts List**

QTY	DESCRIPTION	IMAGE
4	<b>1/4-20 X 1.25" SOCKET HEAD CAP SCREW</b>	
4	<b>1/4-20 NUT</b>	
4	<b>1/4" SPLIT-LOCK WASHER</b>	
4	<b>5/16-18 X .75" SOCKET HEAD CAP SCREW</b>	
4	<b>5/16-18 NUT</b>	
4	<b>5/16" SPLIT-LOCK WASHER</b>	

### ILLUSTRATION OF QUICK CONNECT COMPONENTS

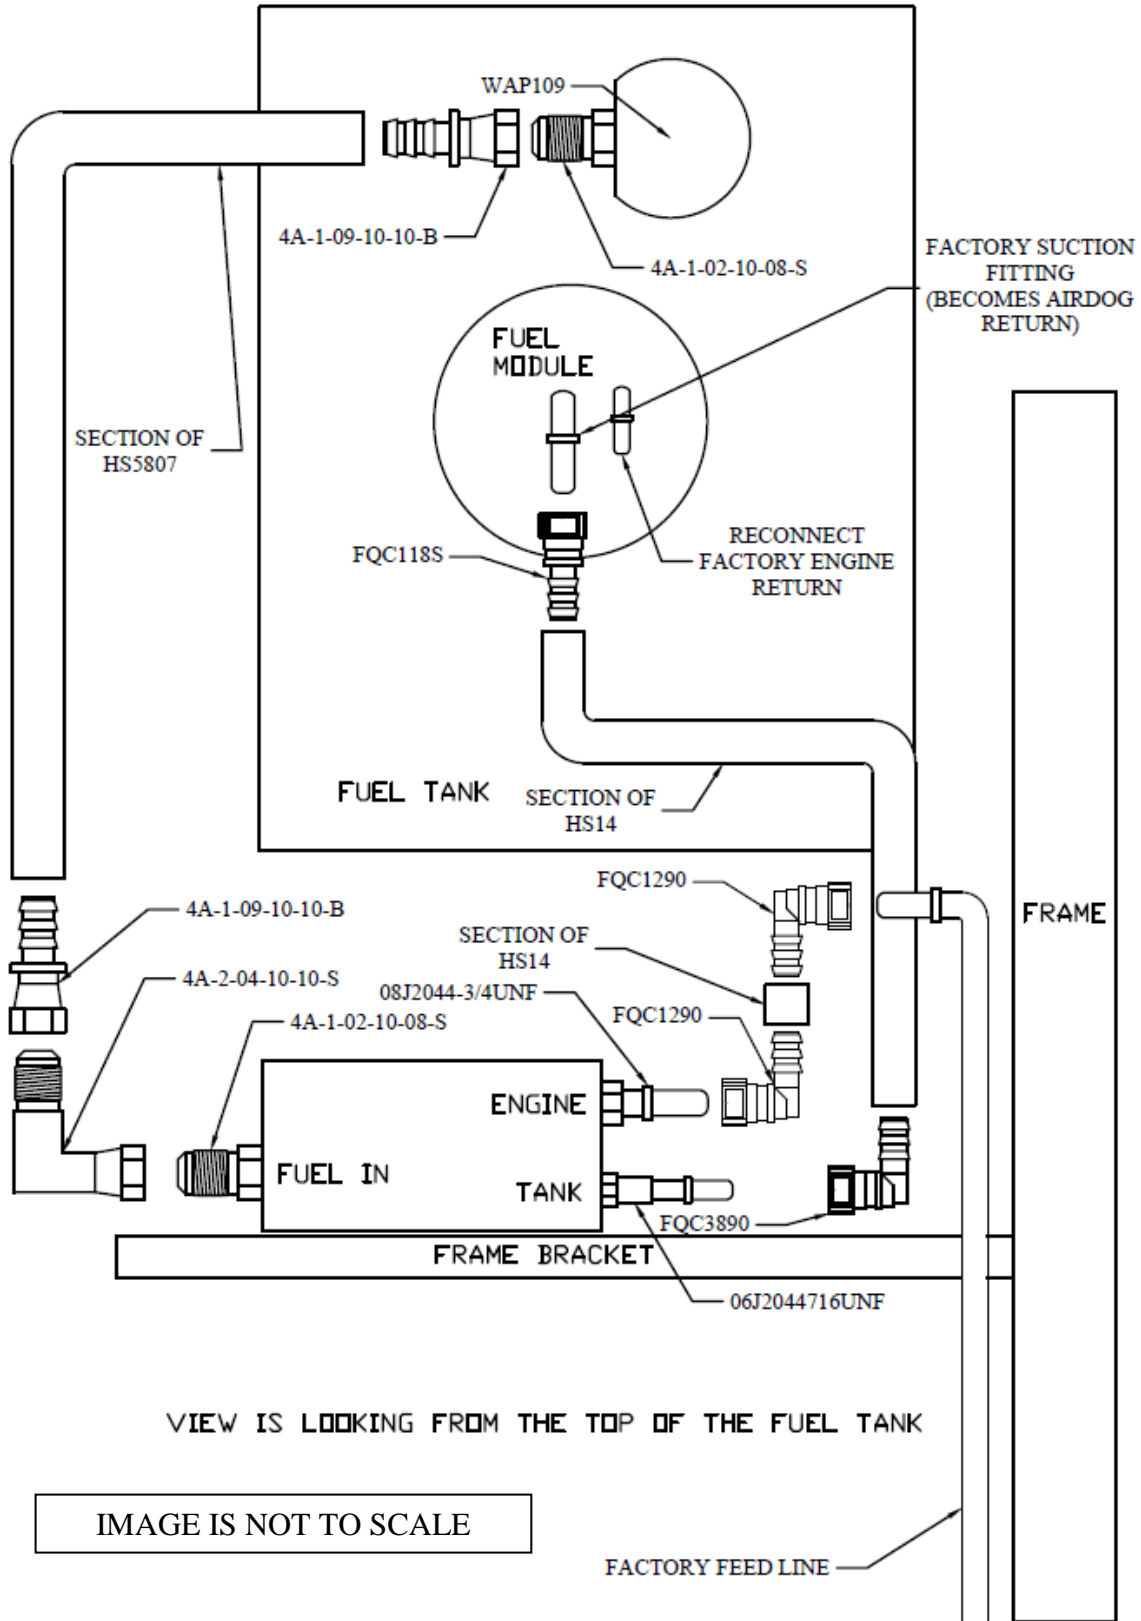

## Removing the Fuel Tank and Factory Flex Feed Line

Before any of the installation process begins, the fuel tank and the factory flexible line from the top of the fuel tank to the hard line on the framerail must be removed. If you are installing a fuel sump, you can skip steps 8-1 to 8-4. You will still need to remove the flex line per step 8-5.

8-1. The AirDog® II-5G DF-220 includes a 5/8" High Flow suction tube (P/N WAP109) to accommodate the high flows of this system. To install the WAP109 draw straw, you will need to remove the fuel tank from the truck. This step will be a lot easier with little to no fuel in the tank.

8-2. Disconnect the filler neck and tank vent line from the filler and vent hard lines by loosening the hose clamps.

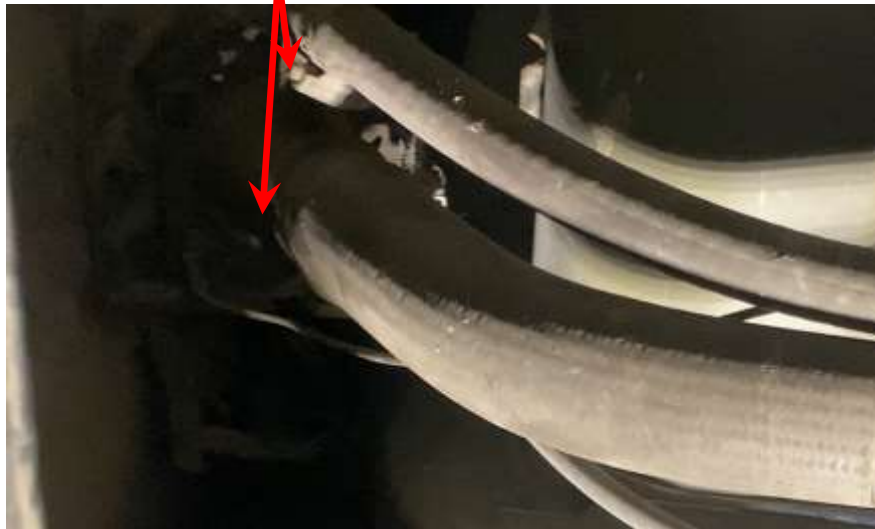


Figure 1

8-3. Disconnect the connectors and wiring harness from the top of the tank.



Figure 2

## Section 8 (Continued)

## Fuel Tank and Factory Flex Line Removal

- 8-4. Once the fuel lines, filler and vent lines, and wiring has been disconnected from the tank, you can safely remove the fuel tank from the truck. A transmission jack will greatly improve the ease of disassembly.

### When Dropping the Tank, Always Remember, Safety First!



Figure 3



Figure 4



Figure 5

- 8-5. Once the fuel tank is removed, finish removing the factory flexible feed line from the truck by removing the end that is on the hard line right in front of where the fuel tank used to be. It will be the larger of the two lines. **Do not remove the smaller line as it is the engine return and will be hooked back up to the top of the tank once the installation is complete!!!** This line can be discarded as it will not be used. If you installed a sump, the factory connector at the top of the tank will need to be blocked off.



Figure 6



Figure 7

## Installing the WAP109 Draw Straw in the Fuel Tank

### TOOLS NEEDED:

- Hose Cutters or a way to cut Fuel Line
- 1" Hole Saw or Step Bit that can go up to 1"
- Hammer
- Large Screwdriver
- 15/16" Wrench or Deep Socket
- Tape Measure
- Permanent Marker
- Small Pilot Drill Bit
- 1/2" Drill Bit
- Cut-Off Wheel or Saw
- 1.5" Wrench or Adjustable Wrench

### PARTS NEEDED:

- **WAP109** High Flow Suction Tube
- **4A-1-02-10-08-S** 3/4-16 ORB Male to -10 JIC male Fitting

- 9-1. Once the tank has been dropped, remove the collection basket as shown in figures 8 and 9. A large flat head screwdriver and a mallet will aid in removing the module.



Figure 8



Figure 9

- 9-2. **DO NOT SKIP THIS STEP!!!** Now that the fuel module has been removed, you will need to modify it slightly to allow the AirDog Air/Vapor return to function properly once it is installed. You will need to cut the original suction line in the module to allow the return to flow back to the tank freely. It will be the larger of the two lines. If you accidentally cut the return line, that is fine. It won't affect the function of the installation. Once completed, set the module to the side to be reinstalled later.

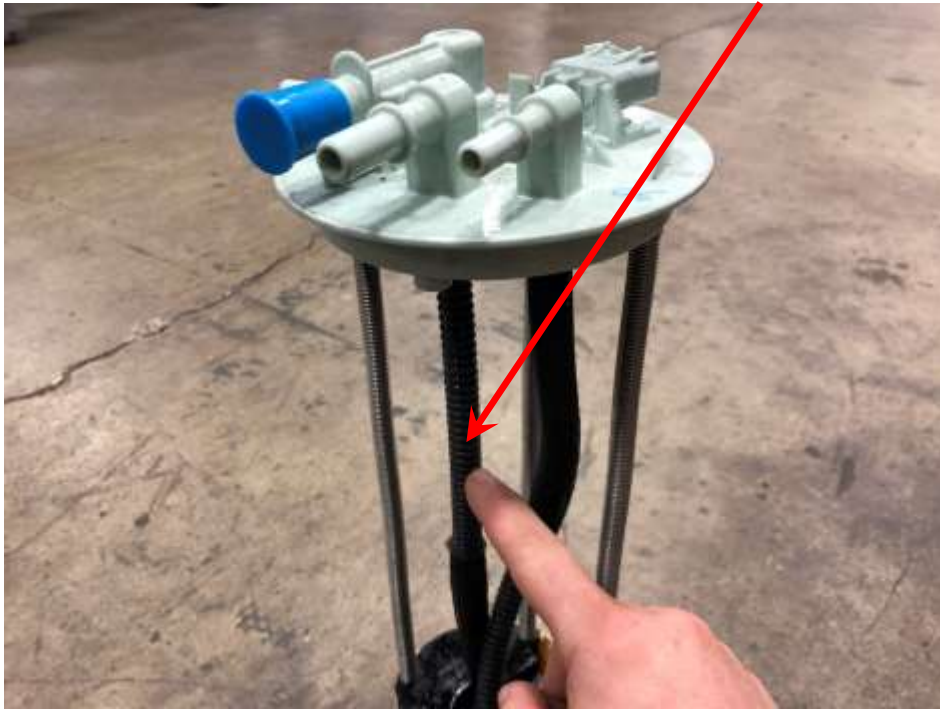


Figure 10

- 9-3. Select a spot to install the WAP109 draw straw. Be sure no bed supports or any cross members will contact the bulkhead fitting once the bed or tank is reinstalled. Drill a 1" hole using a step bit in your selected location (Figure 11). Hold a container below the drill point to catch debris as shown in figure 12.



Figure 11



Figure 12

- 9-4. Remove all burrs from the edge of the hole as shown in figure 13. Be sure to clean out any debris that may have dropped into the tank during the drilling process.



**Figure 13**

- 9-5. Install fitting 4A-1-02-10-08-S into the bulkhead fitting of the WAP109 draw straw, as shown in figure 14, using a 15/16 wrench. Tighten until the O-ring is no longer visible.



**Figure 14**

- 9-6. Mock the suction tube in the fuel tank and measure from the top of the fuel tank to the bottom of the green seal (Figure 15). Take this measurement and subtract a 1/4 inch. Measure from the bottom of the tube and mark the previous measurement as shown (Figure 16). The added 1/4" will ensure the bottom of the straw is against the bottom of the tank once reinstalled.

**Figure 15****Figure 16**

- 9-7. Drill crossing pilot holes through the nylon tube, centered on the marked line, as shown (Figure 17). Use a larger bit (1/2" MAX) to open the holes up (Figure 18).

**Figure 17****Figure 18**

- 9-8. Cut the fuel tube to the measured length (Figure 19). Deburr the tube (Figure 20) to be sure no debris get pulled into the fuel pump.

**Figure 19****Figure 20**

- 9-9. Install the trimmed WAP109 into the previously drilled hole in the tank and orient it in the desired direction (Figure 21). Make sure the bottom of the straw is contacting the bottom of the fuel tank. Install the hardware in this order: washer, lock washer, nut. Tighten the nut with a 1.5" wrench or adjustable wrench till snug (Figure 23). **(Tank Cutaway is for reference. Access to straw is through module hole.)**



Figure 21



Figure 22



Figure 23

- 9-10. Re-install the fuel module. Re-install the factory return line **(The smaller of the two lines)** to the proper port of the fuel module before the tank is fully re-installed.



Figure 24

- 9-11. Reinstall the fuel tank in reverse order in which it was removed minus the original suction line that was removed in step 8-5.



Figure 25

## Installing the Fittings into the AirDog® II-5G Filter Base

### TOOLS NEEDED:

- Torque Wrench
- 7/8" Deep Socket
- 9/16" Deep Socket
- 15/16" Wrench


### PARTS NEEDED:

- 1x 4A-1-02-10-08-S Fitting
- 1x 08J2044-3/4UNF Fitting
- 1x 06J2044716UNF Fitting

- 10-1. Dip the threaded end of the 4A-1-02-10-08-S fitting into clean motor oil and hand-thread into the "INLET" port of the AirDog® II-5G filter base as illustrated in figures 27 and 28. Using a 15/16" wrench, snug the fitting until the O-ring is no longer visible. A torque spec is not given as a socket will not fit between the gerotor cap and the fitting.
- 10-2. Dip the threaded end of the 08J2044-3/4UNF fitting into clean motor oil and hand-thread into the "ENGINE" port of the AirDog® II-5G filter base as illustrated in figures 26 and 27. Using a 3/4" deep socket, torque the fittings to 180in-lb or 15ft-lb.
- 10-3. Dip the threaded end of the 06J2044716UNF fitting into clean motor oil and hand-thread into the "R" port of the the AirDog® II-5G filter base as illustrated in figures 26 and 27. Using a 9/16" deep socket, torque the fitting to 84in-lb or 7ft-lb.

### NOTICE

DO NOT overtighten the fittings or damage may occur!

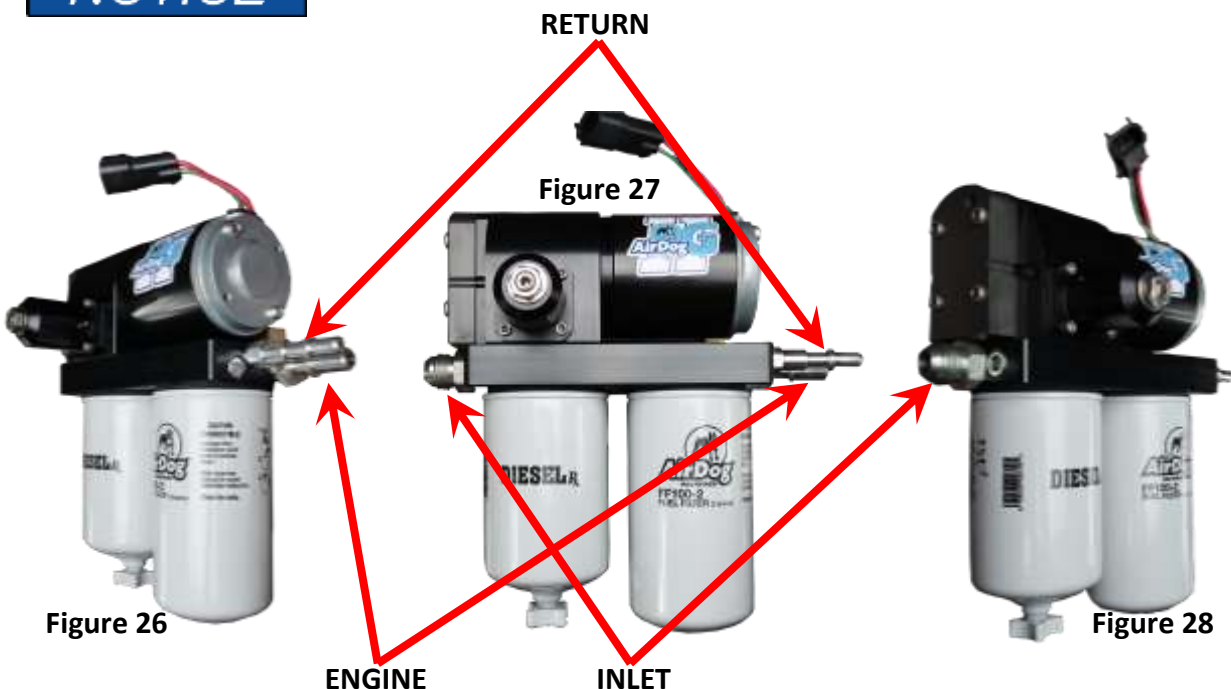

## TOOLS NEEDED:

- Permanent Marker
- Cordless Drill
- Pilot Drill Bit
- 5/16" Drill Bit

## PARTS NEEDED:

- 001-3C-0004 Cradle Bracket
- AirDog Pump Assembly

## Marking and Drilling the Frame Standoff

- 11-1. Using the formed mounting bracket (001-3C-0004), hold it up to the frame stand off and use it to mark where to drill the holes. Make sure the pump clears the bottom of the cab and keep in mind to give plenty of clearance to keep fittings and fuel line away from the frame and the driveshaft. We aligned the bottom left hole with the left slot in the frame standoff.



Figure 29



Figure 30

- 11-2. Using a small drill bit as a pilot bit, drill the holes marked in previous step. Once those holes are drilled, step the bit up to a 5/16" bit and drill the holes. Be careful to not puncture the fuel tank when drilling.

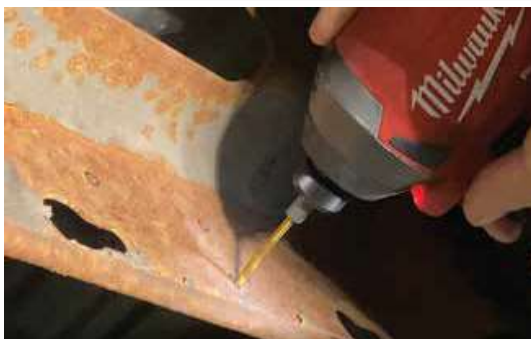


Figure 31



Figure 32

**TOOLS NEEDED:**

- 3/16 Allen
- 7/16 Socket or Wrench

**PARTS NEEDED:**

- 4x 1/4-20 x 1.25 Socket Head Cap Screws
- 4x 1/4" Lock Washers
- 4x 1/4-20 Nuts
- 001-3C-0004 Cradle Bracket

**INSTALL THE AirDog® ON THE CRADLE BRACKET**

- 12-1. Using the above listed hardware, mount the AirDog® to the cradle bracket (001-3C-0004) in the desired orientation (inlet fitting facing the rear of the vehicle) using a 7/16 socket and 3/16 allen wrench. Take note on the orientation of the regulator as it is mounted to the bracket. The pump will not fit in the truck if the regulator is facing the opposite way.

**Figure 33****Figure 34**

## TOOLS NEEDED:

- 1/4" Allen
- 1/2" Socket or Wrench

## PARTS NEEDED:

- 4x 5/16-18 x 0.75" Socket Head Cap Screws
- 4x 5/16" Lock Washers
- 4x 5/16-18 Nuts

**INSTALL THE AirDog® ON THE BRACKET SYSTEM**

- 13-1. Using a 1/4" allen wrench or driver and a 1/2" wrench or socket, install the 5/16 hardware to mount the pump/bracket assembly to the frame standoff. For the pump to fit, you will need to point the regulator towards the front of the truck to where it clears above the bracket. (Figure 36) **Note: Pump pictured is a DF-165. Your DF-220 pump will have a different inlet fitting. The mounting will be the same. Once complete, your pump should look like this on the standoff.**

**NOTICE**

**Make sure the pump wires do not contact the bottom of the cab! Pump Failure due to rubbed through/shorted wiring from improper installation is not covered under warranty!**



Figure 35

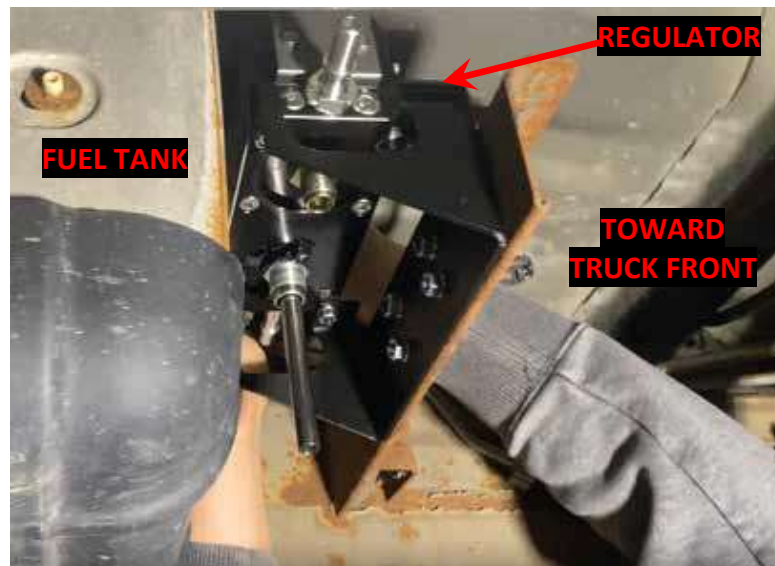


Figure 36

## Fuel Line Assembly Overview

**This kit includes a length of fuel line and separate fuel line ends to allow for much cleaner looking installations! Assemble the fuel lines as you install them per the instructions later in this manual. This section is for explanation purposes.**

### NOTICE

**Do not pre-assemble the fuel lines or the lengths will not be correct!**

- 14-1. Take the fuel line end and lubricate the barbed end with clean motor oil (Figure 37) and press it into the fuel line (HS14) until all of the barbs are covered (Figures 38 and 39). The fuel line end should look like Figure 39.



Figure 37



Figure 38



Figure 39

- 14-2. Now plug that fuel line with that fitting into the connection on the either the AirDog® or the truck where the manual calls it out.
- 14-3. Run the fuel line along the frame away from any hot or moving parts such as exhaust or the driveshaft (Figure 40). Cut the hose to length and insert the other fuel line end that the manual calls out into the fuel line as outlined in step 14-1.



Figure 40

### NOTICE

**Hose clamps are not needed for these push-lock connections! They may cause damage to the hose and cause leaks. Damage due to hose clamps is not covered under warranty!**

## Section 15

## Installing the Fuel Suction Line (From the Tank to the AirDog Inlet)

## TOOLS NEEDED:


- Clean Motor Oil or ATF
- Hose Cutters or a way to cut Fuel Line
- 1" Wrench

## PARTS NEEDED:


- 2x 4S-1-09-10-10-B
- 4A-2-04-10-10-S
- HS5807 Fuel Line
- 5H-2-1-B Zip Ties

## Fuel Suction Line for AirDog® II-5G DF-220

- 15-1. Assemble one end of the suction fuel line (reference section 14) using fuel line end 4A-1-09-10-10-B. Once the end is pressed in, connect it to the JIC fitting in the WAP109 that was installed in section 9. Use a 1" wrench to snug the fitting.

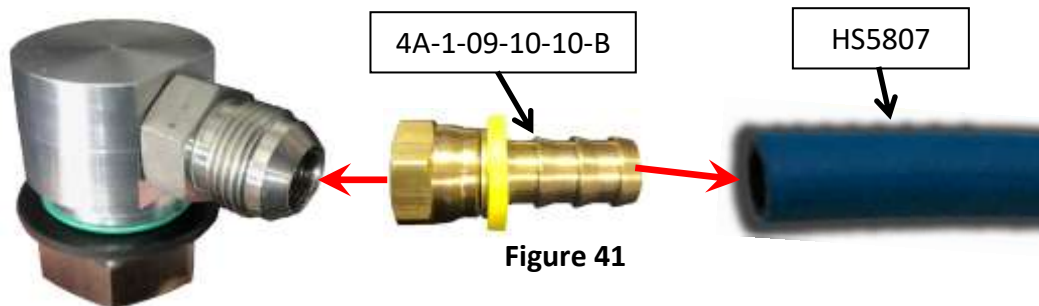

- 15-2. Run the fuel line along the frame as mentioned in step 14-3 to "Inlet" side of the AirDog. Cut the fuel line to length and insert fuel line end 4A-1-09-10-10-B per step 14-1. Once the fuel line end is pressed in, connect it to the 90° JIC fitting 4A-2-04-10-10-S. Connect the 90° fitting to the "inlet" fitting on the AirDog.

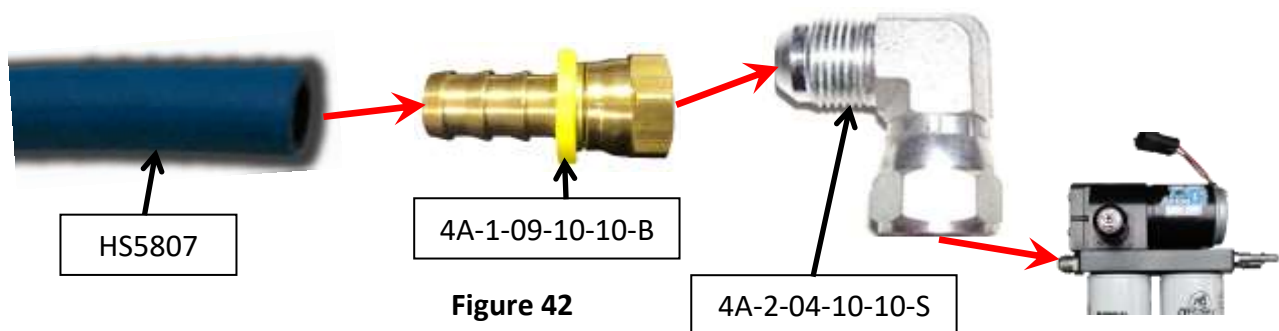

- 15-3. Secure the fuel line using the supplied zip ties. Be sure to secure the line away from any moving or hot parts such as the driveshaft and exhaust.

## Section 16 Fuel Supply Line (From the AirDog® "ENGINE Port to the Factory Framerrail Hard Line)

## TOOLS NEEDED:

- 1/2" Fuel Line Disconnect Tool
- Clean Motor Oil or ATF
- Hose Cutters or a way to cut Fuel Line

## PARTS NEEDED:


- 2x FQC1290
- HS14, 14ft Fuel Line

## Installing the AirDog® Fuel Supply Line to the Engine

- 16-6. Assemble one end of the hose (Reference section 14) using fuel line end FCQ1290 and plug it into the J2044 male connection on the factory fuel line to where the factory suction line was just removed from behind the fuel cooler in the previous step. A "click" will be heard once properly connected.



- 16-7. Run the fuel line to the "Engine" port in the AirDog®. Cut the fuel line to length and insert fuel line end FQC1290 per step 14-1. Once the connector is installed, connect it to the male J2044 fitting in the "Engine" port in the AirDog®. A "click" will be heard once properly connected.

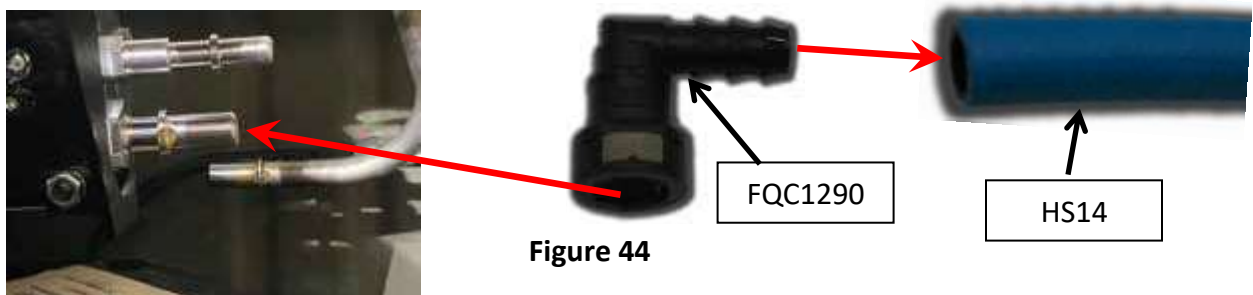

### NOTICE

Properly secure all fuel lines with the supplied zip ties to prevent damage from chaffing and/or abrasion.

## TOOLS NEEDED:

- Clean Motor Oil or ATF
- Hose Cutters or a way to cut Fuel Line and the Filler Neck

## PARTS NEEDED:

- FQC3890, 3/8" 90deg Quick Connect Fitting
- FQC12S, 1/2" Straight Quick Connect Fitting
- HS14, 14ft Fuel Line
- 5H-2-1-B Zip Ties

## AirDog® II-5G Fuel Return Line

- 17-1. Assemble one end of the hose (Reference section 14) using Fuel line end FQC3890 and plug it into the "R" J2044 fitting installed in the AirDog® (Figure 45). A "click" will be heard once the fitting is properly connected.



Figure 45

- 17-2. Run the fuel line along the frame as mentioned in step 14-3 to the factory J2044 male 3/8" return quick connect fitting on top of the tank. Cut the fuel line to length and insert fuel line end FQC12S per step 14-1. Once the connector is installed, connect it to the male J2044 fitting in the **factory outlet/suction line in the fuel module**. It will be the larger of the two fittings. The factory engine return should have been reconnected when the tank or bed was re-installed. The factory return from the engine must be reconnected to its factory location. A "click" will be heard once properly connected.



Figure 46

## AirDog® Wiring Harness Install WIRING DIAGRAM

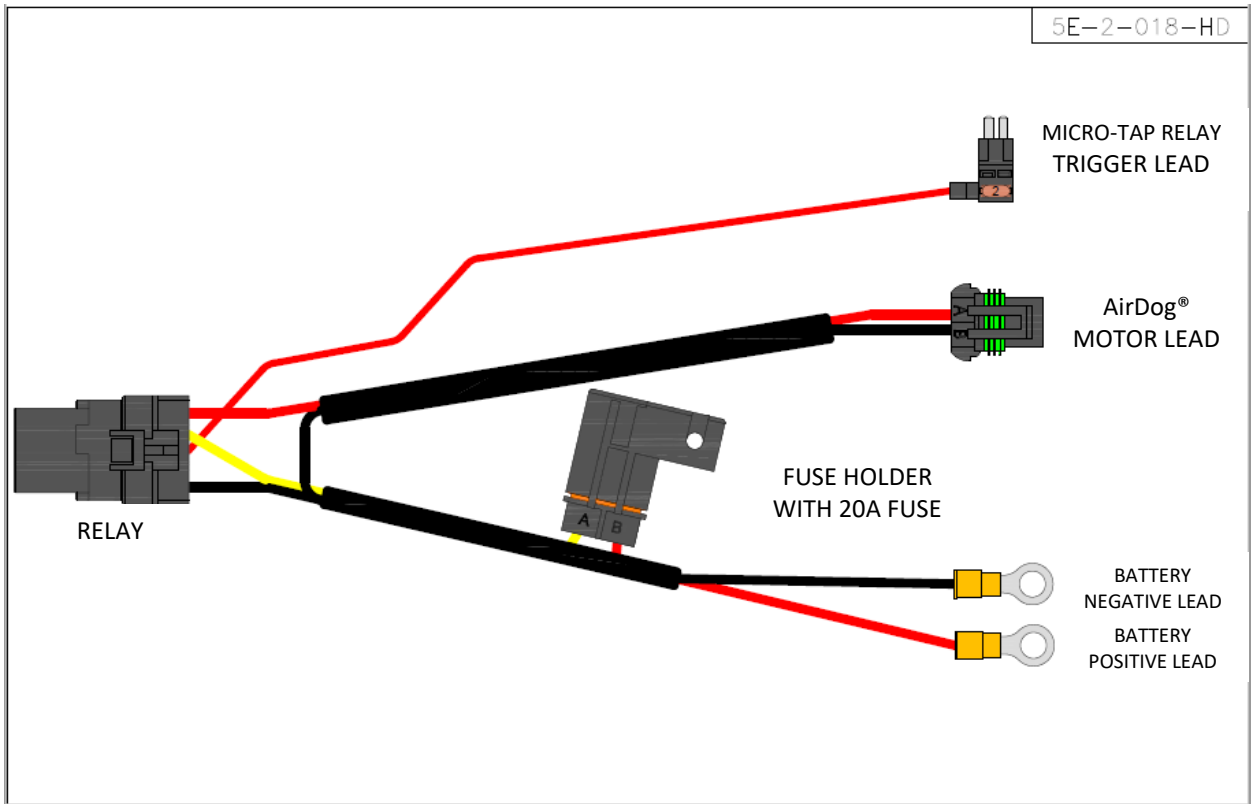


Figure 47 (Not to Scale)

### Secure the Relay and Fuse Holder to the Vehicle

- 18-1. Secure the relay and fuse holder to the vehicle. Be sure to rout the wires away from any moving parts. The relay is illustrated below in figure 48. The fuse holder mounting is the same concept.



Figure 48

## Connecting the AirDog® Relay Control

- 18-2. Remove the plastic housing (skirt) around the fuse box. On some models it may be necessary to remove the fender/cowl brace to allow access to the fuse box
- 18-3. After accessing the fuse panel, use a test light or voltmeter to find a fuse terminal that is **HOT** only when the ignition is in the on position. Connect the 'Red' Relay Trigger wire with the micro fuse tap to that terminal. Be sure to install the fuse that is removed back into the fuse tap we supply, once installed into the fuse box the fuse tap should have both fuse spots filled. **TBC Batt, Ign 1 or 2, Acc and HVAC are commonly used to supply power.**



Figure 49

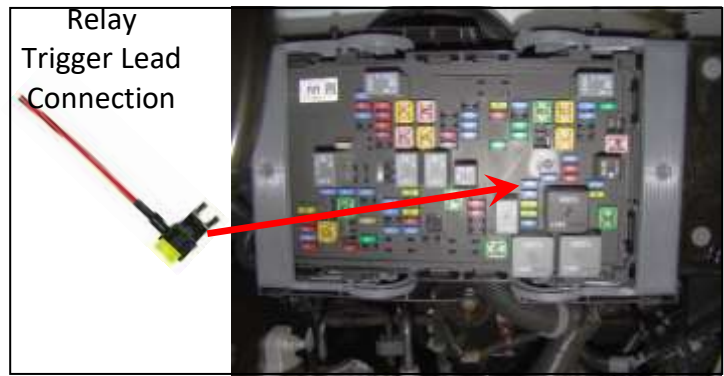


Figure 50

## Connecting the Power Supply Leads to the Alternator or Battery

### NOTICE

Connecting the power supply leads to the alternator instead of the battery will create a corrosion resistant connection.

- 18-3A. Route the Red and Black power supply leads to the alternator. Connect the Black (-) lead to the alternator Chassis Ground connection. Connect the Red (+) lead to the alternator Hot Lead going to the battery.

Black (-)

Red (+)

Replace the Protective Cover



Figure 51



Figure 52

## Connecting the power supply leads Continued

- 18-4B. Should you choose to connect the power supply leads directly to the battery, connect the Red (+) led to the Positive (+) post of the driver's side battery. Connect the Black (-) lead to the Negative (-) post of the same battery.

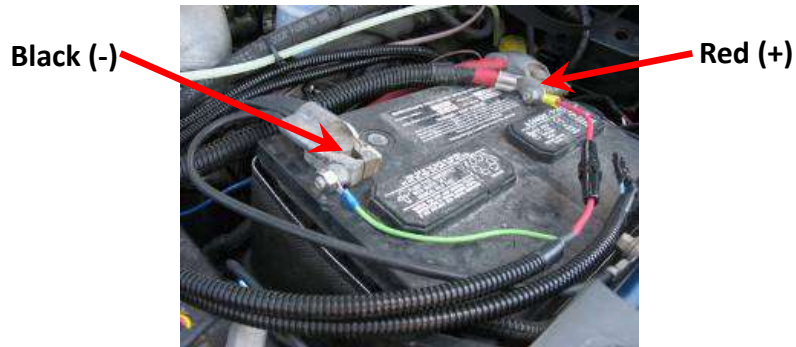


Figure 53

- 18-5. Route the wiring harness to the AirDog® and connect the 2 pin Deutsch connector to the corresponding connector on the AirDog®.

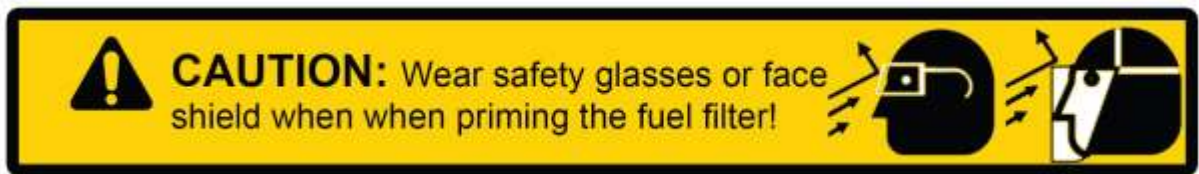


Figure 54

## INITIAL START PROCEDURE

The AirDog® is a self-priming system, however, to prevent potential damage to the system, it is recommended to fill the pre-filter with diesel fuel before initial startup.

- 19-1. Fill the water separator with diesel fuel.
- 19-2. Turn the starter key to the on/run position.
- 19-3. While the AirDog® is operating, bleed the air from the fuel line to the engine by loosening the fuel line connection at the engine fitting. As soon as the line is purged of air and pure fuel is observed, properly tighten the fuel fitting.



**NOTE:** put a rag or shop towel over and around fitting to prevent splatter. Catch all spilled fuel and dispose of properly.

- 19-4. Start the engine!

**RECHECK ALL FUEL FITTINGS FOR LEAKAGE AND PROPERLY TORQUE. BE SURE ALL FUEL LINES ARE PROPERLY ROUTED TO PROTECT FROM EXCESSIVE HEAT AND SECURED TO PROTECT FROM CHAFFING AND ABRASION. RECHECK ALL ELECTRICAL LINES, SECURE AS NECESSARY.**

### Checking Pump Noise!

**NOTE:** Each AirDog® has been manufactured in a Quality Controlled process and fully tested for operation and performance before shipment. This is a smooth running system. However, if any fuel fitting on the vacuum side, between the fuel tank and the AirDog® or the pre-filter, has been left loose during the installation process, the system may suck air at an excessive rate and will be very noisy. To check for this problem, unscrew the pre-filter 3 or 4 full turns and activate the AirDog® by turning the ignition switch to on. If the AirDog® runs quietly, then excessive air from a loose fitting or leaking pre-filter seal is most likely the reason for the excessive noise. Correct as necessary.

- A. The seal groove in the pre-filter is a snug fit and on occasion the seal has been found to not be fully seated. Remove the pre-filter, remove the seal from the top of the nut plate. Clean and lubricate the seal groove. Carefully replace the seal in the groove. Be sure to fully seat the seal.
- B. Check the fittings, especially the quick connect at the tank.

## Filter Service Recommendations

Plugging of either the fuel filter or the water separator will cause low fuel pressure and low flow to the engine. If a low fuel pressure issue exists, replace the fuel filter. Typical fuel filter life is 15-20k miles depending on fuel quality.



### The Water Separator

Replace the water separator every other time you change the Fuel Filter or if it becomes damaged or plugged. It is suggested to check/drain the water separator every three months or as needed should you experience excessive 'water in fuel' conditions. When installing the water separator, be sure to clean the underside of the AirDog® base. Follow the instructions printed on the pre-filter for proper tightening procedures.

#### NOTICE

Be extremely careful to prevent any contaminants or debris from entering the pre-filter when removing it for cleaning! Large debris will jam the Gerotor and cause the fuse to blow. This is not a warranty item. Should this happen, you can easily put the system back into working order. See the instructions on "How to clean the Gerotor" for proper procedures.

### The Fuel Filter


Remove the fuel filter by turning it counter clockwise. **DO NOT** pre-fill the fuel filter with fuel. The AirDog® will fill the filter and prime the system automatically. Follow the instructions on the filter for proper tightening procedures.

#### NOTICE

Dispose of waste fuel and used filters properly to protect OUR environment.

**CLEANING DEBRIS/CHECKING FOR DAMAGE IN/TO THE GEROTOR ASSEMBLY**


**STEP 1:** Remove the four (4) socket head cap screws that secure the Gerotor cap using a 3/16 allen wrench.

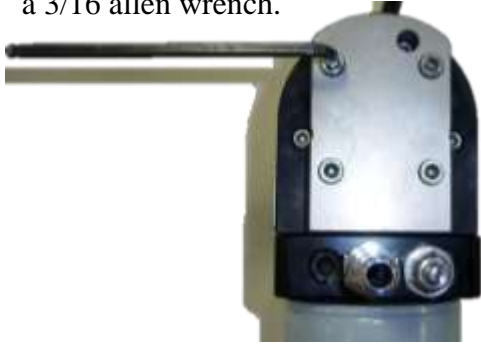

**STEP 2:** Carefully remove the O-rings you will need to reuse them.



**STEP 3:** Remove and clean the Gerotor. Be very careful to not damage the Gerotor.

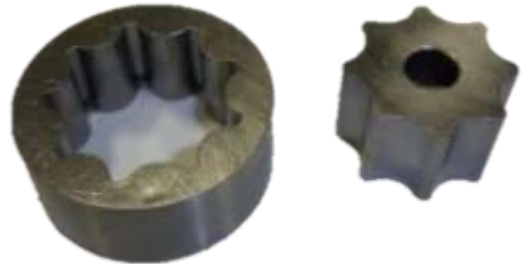

**STEP 4:** Remove the O-rings and clean/inspect the inside of the Gerotor pocket.



**STEP 5:** Reinstall the center gear.




**STEP 6:** Align and install the outer gear and O-rings.



**STEP 7:** Install the Gerotor Cap. Be very careful not to dislodge or pinch the O-rings.



**STEP 8:** Loosely assemble the cap screws. Torque the cap screws in an opposing pattern.

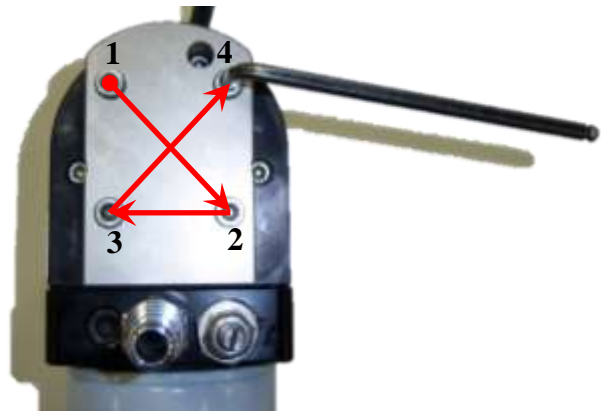

If there is damaged found to either the Gerotor, Gerotor pocket, or O-rings, call into AirDog® Tech Support for further assistance.

### AirDog® II-5G ADJUSTABLE FUEL PRESSURE REGULATOR

The AirDog® II-5G rises to a new level of performance with an adjustable diaphragm fuel pressure regulator. This regulator offers more consistent fuel pressure and allows for higher flow rates at pressure. This regulator can also be boost compensated to battle any pressure drops under wide open throttle. The boost compensation kit, P/N AD-BOOSTCOMP, is sold separately.

#### PRESSURE ADJUSTMENT FOR THE DURAMAX

Loosen the Jam Nut with a 5/8 or 9/16 wrench


Re-torque after adjustment



Use a 3/16 allen to adjust the pressure regulator



#### PRESSURE ADJUSTMENT

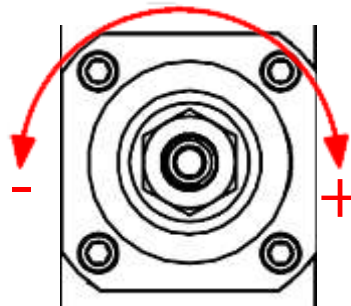

PRE-SET AT 8-10PSI  
FROM FACTORY

Turn the adjuster screw counter-clockwise to reduce the output pressure or clockwise to increase the pressure. Be sure to re-torque the jam nut after adjusting the regulator. **IT IS STRONGLY RECOMMENDED TO ADJUST THE PRESSURE WHILE USING A FUEL PRESSURE GAUGE. TOO MUCH OR TOO LITTLE PRESSURE MAY CAUSE DAMAGE TO THE INJECTION SYSTEM!**

Every AirDog II-5G has a 90-degree brass fitting in the pump to where you can add a fuel pressure gauge or fuel pressure sending unit for an electric gauge.



# PUREFLOW AIRDOG *LIFETIME LIMITED EXPRESS WARRANTY*

FOR  
Covered PureFlow AirDog I, II and Raptor Systems

## IMPORTANT NOTICE

**TO ACTIVATE YOUR PUREFLOW AIRDOG WARRANTY, YOU MUST COMPLETE AND MAIL YOUR WARRANTY CARD TO PUREFLOW AIRDOG WITH A COPY OF YOUR ORIGINAL SALES RECEIPT WITHIN 30 DAYS OF PURCHASE. FAILURE TO COMPLETE AND SUBMIT YOUR WARRANTY CARD WILL RESULT IN A WARRANTY PERIOD OF THE COVERED PRODUCE TO ONE (1) YEAR FROM THE DATE OF PURCHASE.**

PureFlow AirDog (hereafter collectively, "SELLER") warrants and guarantees only to the Original Purchaser (hereafter collectively, BUYER) that All PureFlow AirDog Filtered Systems (hereafter collectively, PRODUCT) shall be free from defects of materials and workmanship in the manufacturing process for as long as the BUYER owns the PRODUCT.

The Lifetime Limited Express Warranty is limited to the PRODUCT purchased by the original BUYER of the PRODUCT and limited solely to the parts contained within the PRODUCT and EXCLUDES ALL ELSE INCLUDING FILTERS AND WATER SEPARATORS. Any PRODUCT that is in question of Warranty must be returned, shipped prepaid, to PureFlow AirDog. All Warranty claims are subject to the approval of PureFlow AirDog. If it is determined that a Warranty claim exists, PureFlow AirDog will, at its sole discretion, replace the defective PRODUCT with a comparable PRODUCT, repair the defective PRODUCT, or refund the BUYER'S purchase price in exchange for the PRODUCT. Repairs or replacements are warranted for only the remainder of the original warranty period and only to the original BUYER.

Under no circumstances shall the SELLER be liable for any labor charged or travel time incurred in the diagnosis for defects, removal, or reinstallation of the PRODUCT, or any contingent expense.

Under no circumstances will the SELLER be liable for any damage or expense incurred by reason of the use or sale of the PRODUCT.

Other than expressly set forth herein, the SELLER shall in no way be responsible for the proper or improper use and service of the PRODUCT. In no event shall the SELLER be liable for any special, incidental, indirect or consequential damages of any kind or nature, whether or not the BUYER of the PRODUCT was advised of the possibility of damage or harm, arising or resulting from the use or performance of the PRODUCT and BUYER hereby waives the right to any and all such claims.

BUYER, acknowledges that he/she is not relying on SELLER'S skill or judgment to select or furnish goods suitable for any particular purpose and that SELLER has no liability that will extend beyond the scope of the LIMITED EXPRESS WARRANTY contained herein, and BUYER hereby waives all remedies or liabilities, expressed or implied, arising by operation of law or otherwise. (including, without limitation, any obligation of SELLER with respect to fitness for any particular purpose; merchantability; and special, incidental, indirect or consequential damages) or whether or not occasioned by SELLER'S negligence.

SELLER disclaims any warranty and expressly disclaims any liability for personal injury or damages related to BUYER'S use of the PRODUCT. BUYER acknowledges and agrees that the disclaimer of any liability for personal injury is a material term for this agreement and BUYER agrees to indemnify SELLER and hold SELLER harmless from any claim related to the PRODUCT and its use or performance. Under no circumstances will SELLER be liable for any damages, liabilities, costs or expenses incurred as a result of or by reason of use, performance or sale of the PRODUCT, including without limitation, any damages, liabilities, costs or expenses incurred by reason of BUYER'S negligence related to those uses of the PRODUCT.

The proper installation of the PRODUCT is the sole responsibility of the BUYER. The SELLER assumes no liability regarding improper installation or misapplication of the PRODUCT.

SELLER hereby provides the following limited warranty as to description, quality, merchantability, fitness for the PRODUCT'S purpose, productiveness, or any other matter of SELLER'S PRODUCT sold herewith. The SELLER shall be in no way responsible for the open use and service of the PRODUCT and the BUYER hereby waives all rights other than those expressly written herein. This Warranty shall not be extended or varied except by a written instrument signed by SELLER and BUYER.

IN THE EVENT THAT THE BUYER DOES NOT AGREE WITH THIS AGREEMENT, THE BUYER MAY PROMPTLY RETURN THE PRODUCT, IN A NEW AND UNUSED CONDITION, WITH A DATED PROOF OF PURCHASE, TO THE PLACE OF PURCHASE WITHIN THIRTY (30) DAYS FROM THE DATE OF PURCHASE FOR A FULL REFUND. THE BUYER AGREES THAT THE INSTALLATION OF THIS PRODUCT CONFIRMS THE BUYER HAS READ AND UNDERSTANDS THIS AGREEMENT AND ACCEPTS THE TERMS AND CONDITIONS OF THIS AGREEMENT.

## Warranty Procedure

In the unlikely event a warranty appears as if it may be warranted, the following steps are taken:

- 1 The customer discussed the symptoms of the problem with a PureFlow AirDog Technician. The customer is to have the system Serial Number and Model Number available for the Technician when the call is made. This will expedite all steps of the process.
- 2 The customer performs any and all tests requested by the PureFlow AirDog Technician. This is done to isolate the potential problem while eliminating potential installation or maintenance related issues,
- 3 If the PureFlow AirDog Technician determines based on the customer feedback concerning the requested testing that system may be at fault, the customer is advised that all returned pumps are tested upon arrival and should this returned pump perform at design criteria upon arrival, the customer will be charged a \$50.00 fee.
- 4 The PureFlow AirDog Technician will first request the customer's phone number in the event the phone call is accidentally disconnected and then transfer the customer to a PureFlow AirDog Customer Service Representative. Should a Customer Service Representative not be available, the Technician will offer the Customer the option to hold, call back, or receive a return call.
- 5 The PureFlow AirDog Customer Service Representative will check to determine if the customer's Warranty Registration Card is on file.
  - a. If no Warranty Registration is found, the customer will be required to supply the original purchase receipt showing the purchase date.
  - b. If no Warranty Registration is found, the customer will be advised of the options should the system in question is out of the default warranty period (1 year).
- 6 The PureFlow AirDog Customer Service Representative will request the customer information, including: Name, Address, Phone Number, Model Number, Serial Number, Year / Make / Model of vehicle, Name of Dealer purchased from, Purchase Date, Description of Problem, Customers' understanding of the resolution, and customer credit card information.
- 7 PureFlow AirDog will cover Ground Shipping charges to ship the replacement unit and will include a prepaid shipping label for the return of the defective unit. Any additional items ordered at the time of the replacement shipment will include their portion of the shipping cost.
- 8 A period of 15 Calendar Days from the time of shipment is provided for the receipt of the defective unit at the PureFlow AirDog facility. Failure to return ship the defective unit to arrive within the defined time period will result in a charge of \$250.00 against the customer's credit card as the purchase cost of the defective unit.

**Revised: October 3, 2025**